

SHUT-OFF POWER AT SOURCE BEFORE PERFORMING THESE STEPS

STEP 1:
REMOVE GUARDS AND NECESSARY SERVICE PANELS FROM MACHINE
REMOVE LAMP CONNECTOR FROM CERAMIC END (NOT SHOWN)
REMOVE WING NUTS FROM EXISTING BRACKET POSTS
REMOVE OLD 1082LR LAMP ASSY FROM EXISTING BRACKET ASSEMBLY

STEP 2:
ASSEMBLE NEW STYLE LAMP TO ADAPTER BRACKET
SECURE WITH PLASTIC WING NUT

WARNING: DO NOT OVERTIGHTEN WING NUT OR THREADS
WILL BE STRIPPED - FINGER TIGHTEN ONLY

Model 2024 has similar hole & stud location for same adapter bracket mount

STEP 3:
INSERT STEP 2 SUBASSEMBLY INTO LAMP HOLE AND ON TO BRACKET POSTS
SECURE WITH EXISTING PLASTIC WING NUTS
RE-INSTALL LAMP CONNECTOR

RECONNECT ALL PREVIOUSLY REMOVED GUARDS AND SERVICE PANELS TO AIR HANDLING MACHINE
TURN POWER ON
INSPECT FOR PROPER LAMP OPERATION VIA SIGHTGLASS

